

Equipment		Available Size
Finisher FS-607	Primary (main) tray (Staple)	Standard Size: SRA4 ☐, A3 ☐, B4 ☐, Foolscap, A4 ☐/☐, B5 ☐/☐, A5 ☐, 8K ☐, 16K ☐/☐, 12" x 18" ☐, 11" x 17" ☐, 8.5" x 14" ☐, 8.5" x 11" ☐/☐, 5.5" x 8.5" ☐ Custom Size: Max. 314 mm x 458 mm to Min. 182 mm x 148 mm Tab Paper: A4 ☐, 8.5" x 11" ☐
	Folding mode tray	Standard Size: SRA3 ☐, SRA4 ☐, A3 ☐, B4 ☐, A4 ☐, 12" x 18" ☐, 11" x 17" ☐, 8.5" x 14" ☐, 8.5" x 11" ☐ * SRA3 ☐ is unavailable for Fold & Staple mode. Custom Size: Max. 314 mm x 458 mm to Min. 210 mm x 297 mm Tri-Fold: A4 ☐, 8.5" x 11" ☐
Punch kit PK-512/PK-513 (option for Finisher FS-520/FS-607)		2 holes (PK-512): A3 ☐, B4 ☐, Foolscap, A4 ☐/☐, B5 ☐/☐, A5 ☐/☐, 8K ☐, 16K ☐/☐, 11" x 17" ☐, 8.5" x 14" ☐, 8.5" x 11" ☐/☐, 5.5" x 8.5" ☐ 4 holes (PK-512): A3 ☐, B4 ☐, A4 ☐, B5 ☐, 8K ☐, 16K ☐, 11" x 17" ☐, 8.5" x 11" ☐ Swedish 4 holes (PK-513): A3 ☐, B4 ☐, A4 ☐, B5 ☐
Output tray OT-502		Max. 331 mm x 488 mm to Min. 100 mm x 148 mm



Detail

Use the Paper Setting function to specify the paper size to be loaded in tray 1 to 5 and bypass tray, selecting appropriate one from [Standard], [Custom], and [Tab Paper]. With [Standard] selected, the machine will automatically detect the paper size loaded in the tray. See page 9-33 for details.

Paper size for cover sheets to be used in perfect binding can be specified in the Output Application setting. See page 12-32 for details.

Cover sizes available for perfect binding differ from the above mentioned. See page 12-32 for details.

Auto tray switch function

If the selected paper tray runs out of paper while a job is being printed and a different paper tray is loaded with paper meeting the following conditions, the other paper tray is automatically selected so printing can continue. If the optional Paper feeder unit PF-602 is installed, a maximum of 7,500 copies can be made continuously. (The paper tray is automatically switched only if the "ATS Permission parameter" in the Utility mode is set to "Permit".)

Operating Conditions (Set the following condition at "01 System Setting\03 Feed Tray Setting" of User Setting.)

- Select the paper trays to be selected automatically by "02 Feed Tray Auto Selection", if Auto paper select is functioned.
Tray Priority is available.
- Select "On" at "03 ATS Permit Setting"
- Select the paper type setting of the tray which is automatically selected when ATS functions at "04 Auto Paper Type"

Load the following paper into the paper trays.

- The same size in the same orientation.
- The same paper type.

To store copy paper

Observe the following precautions when storing the paper.

- Store paper in a cool, dry area. Using damp paper may cause a paper misfeed.
- Keep partially used packages tightly wrapped during storage.
- Do not place paper packages vertically to store. Paper curl due to the vertical storage may cause a paper misfeed.