


Battery change from display of Touchline

PLEASE forward this important information to whom it may concern!

Subject: Touchline CF375, CP375, C375, TF375, TCF375, ...

Starting Position: The display is supplied with a battery in order to guaranty that some information on the display doesn't get lost. The battery has to be changed every two years.

Symptom: - Display shows an error message (see photograph)

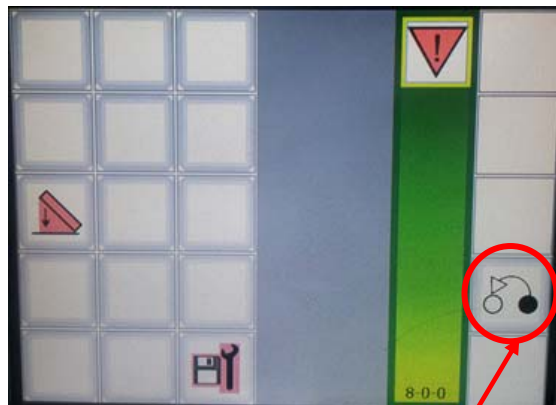

- "T"-bottom doesn't get anymore (table goes up, air starts but feeder doesn't feed)

How to proceed:

- Switch off the machine
- take away the housing of the display
- change battery CR2032 (PN.: 087.0000.902)
- fix the housing of the display
- switch on the machine
- press "undo" icon

- press "I" icon



- press "R" icon to reference the system (important)
- set time and date in service menu
- finished

Remark:

- If customer has the problem but no battery
- he can press the "undo" icon
- press "R" icon to reference the system (important)
- he can work as long as he doesn't switch off the machine, otherwise he has to do it again till he has changed the battery!

Recommendation: - Change battery every 1.5 to 2 years