


Changing the Output Mode

- ❖ *Note: If you use a take-up cassette in on-line processing mode, the imagesetter reports error 10 (cassette size mismatch) and the media cannot advance.*


1. Press Pause, Configuration, Output Mode.

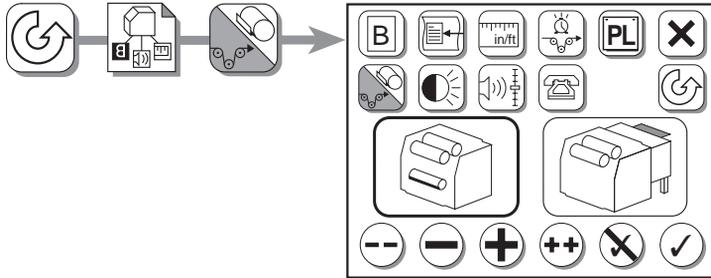

2. Press to select the output mode:



3. Confirm your selection:

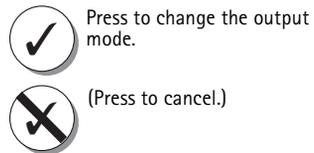

The button indicates the current output mode:

