
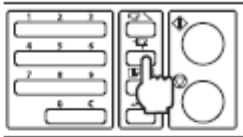


4-2. Adjusting the Stitching Section


- 1 Press the jog key.**
 The stitching side jogger and the back jogger will move.



When you press the jog key once, the joggers will close. When pressed again, they will open.



- 2 Check the paper touches the stitching side jogger lightly.**
 If an adjustment is necessary, go to step 3.
 If an adjustment is not necessary, go to step 5.

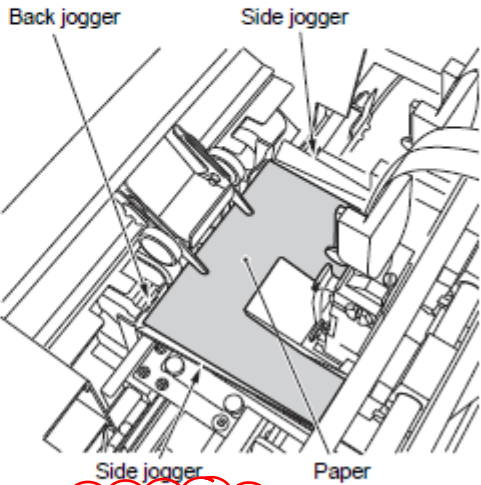

- 3 Press the ◀ key or ▶ key to change the value.**

