



DocuColor 240/250 Online Support

Solution Add a Printer and Install a Print Driver on a Computer With Apple Macintosh 10.x Operating System (OS) to Print From the DocuColor With the Built-in EFI Fiery Controller or With the External EFI Fiery Color Server Using LPR

NOTE: Before you begin, print a Configuration Report to make sure the printer has an IP Address. See the **Related Items** below for additional information. If the printer does not have an IP Address, contact your System Administrator to provide one, or to perform this solution if you do not have rights to install a print driver.

These instructions assume that TCP/IP is configured on the Macintosh and on the printer.

This solution assumes that the correct print driver for this product and the operating system you are using has been downloaded and extracted to a known location on the hard drive. If you have not already done so, click on the [Drivers & Downloads] link under the **Product Resources** section on this window to download a print driver.

To install the print driver:

1. Browse to the location of the downloaded print driver.
2. Double-click on the driver file. The contents of the file will be displayed.
3. Double-click on the [Print Driver] folder. The contents of the folder will be displayed.
4. Double-click on [OSX Installer]. The Authenticate window will be displayed.
5. Enter the username and password in the fields provided, and then click [OK]. The Software License Agreement window will be displayed.
6. Read the agreement, and then click on [Accept] to continue. The OSX Installer window will be displayed.
7. Click on [Install]. The driver will install. When the installation is complete, an 'Installation was successful' message will be displayed.
8. Click on [Quit].

To add the printer:

1. Click on [Go] on the Finder toolbar, and then select [Applications] from the menu. The Applications window will be displayed.
2. Double-click on the [Utilities] folder. The Utilities window will be displayed.
3. Double-click on the [Print Center] utility if Mac OS 10.2x is being used, or click on [Printer Setup Utility] if OS 10.3x or higher is being used.
4. If this is the first time that the Print Center is opened, a message window will be displayed stating 'You have no printers available. Would you like to add to your list of printers now?' Click on the [Add] button in the message. The Printer list window will be displayed. If this is not the first time the Print Center has been opened, click on [Add] in the Printer list window.

5. Set up IP (LPR) printing.
 - o For version 10.2 x, select [IP Printing] as the transport from the pull-down menu.
 - o For version 10.3x, select [IP Printing] as the transport from the first pull-down menu, and then select [LPD / LPR] from the **Printer Type** pull-down menu.
 - o For version 10.4x, select the [IP printer icon] at the top of the Printer Setup window, and then select [Line Printer Daemon - LPD] from the **Protocol** pull-down menu
6. Enter the IP Address of the printer in the **Address** field, and then press [Enter] on the keyboard.
7. For version 10.2 x, click on the [Use default queue on server] check box to remove the check mark, if necessary.
8. Enter a queue name of print, hold or direct in the **Queue Name** field.

NOTE: Using 'print' as the queue name will allow jobs to print immediately and save the job in the print queue. Using 'hold' as the queue name will cause jobs to be held at the Fiery controller until they are released to print. Using 'direct' will cause jobs to print immediately and not be saved.

9. For version 10.2x, make sure there is no check mark in the [Default Queue Name] check box.
10. Select [Xerox] from the **Printer Model** or **Print Using** pull-down menu. The Model Name or Print Using window will be displayed.
11. Scroll to and select the PPD for the model of printer being used, and then click on [Add].
12. Click once to highlight the printer from the list of printers.
13. Click on [Printers] on the toolbar, and then select [Show Info]. The Printers Info window will be displayed with the name and location of the printer.
14. Select [Installable Options] from the pull-down menu at the top of the window. The Installable Options list will be displayed.
15. Select the installable options that are present on the printer, and then click on [Apply Changes].

NOTE: If you are not sure what the options are, contact your System Administrator.

16. Click on the red [X] button in the upper, left corner to close the Printers Info window. For versions 10.2x and 10.3x, the LPR printer will be displayed in the Printer List with the queue name followed by the IP Address. For version 10.4x, the LPR printer will be displayed in the Printer List with the name that was entered in the Name field.

NOTE: The default printer is listed in bold on the Printer list. The last printer added will automatically be the default unless otherwise changed.