

# EN/PRESS

DIGITAL MULTI-MEDIA PRESS

## DUPLEX PAGE ALIGNMENT


1. Press the Printer Classic button



2. Press the Reset Button.

3. Use the number pad to enter 806182.

4. Press and hold the Clear [C] Button.

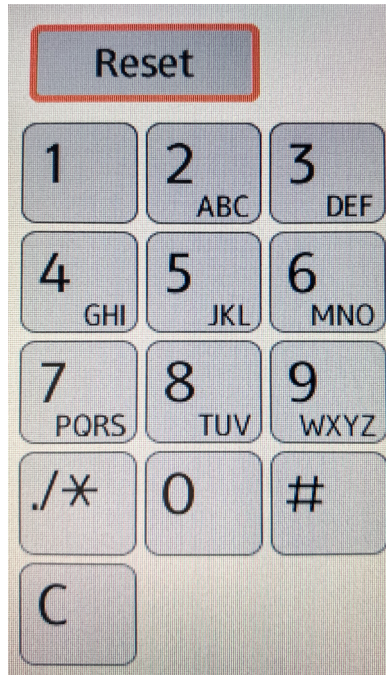

**√\* BUTTON:**

Enters Negative sign before setting numbers - Will also enter a decimal place between numbers

**# BUTTON:**



Press after entering a setting to save the numbers.

5. Press the System SP button.

6. Expand the Feed button.

7. Expand the 1001 Leading Edge Registration button.

8. Select the Media Weight selection based on the media weight of the paper using the chart below.

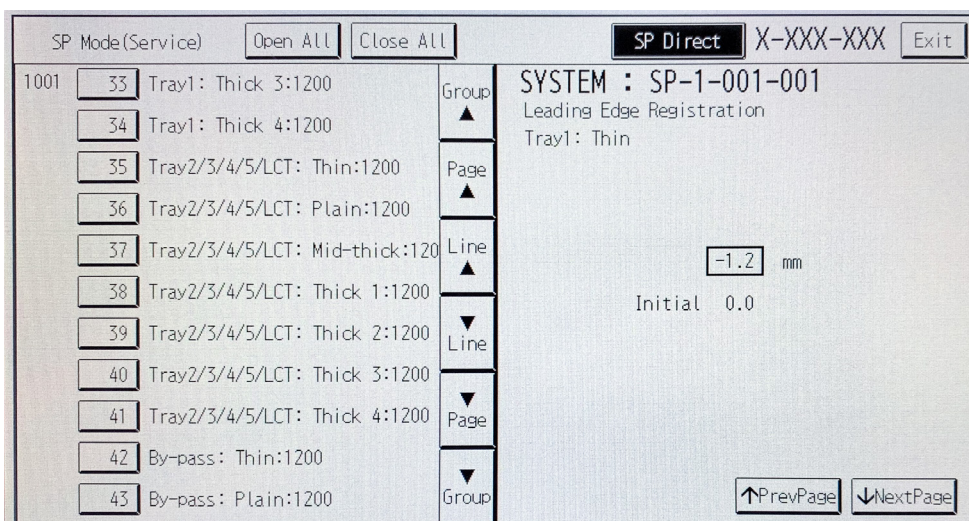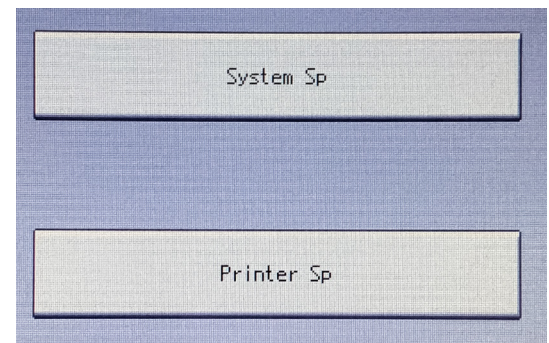

# EnPress Duplex Page Alignment

To begin, print the duplex page alignment test file located on pages 3 and 4 of this document.

**Note: The weight of the paper used must match the media setting used.**

## Adjusting the Front Side

Note: The front side must be adjusted to center before aligning the duplex side.

1. Press the Printer Classic button.
2. Press the Reset button.
3. Use the number pad to enter 806182.
4. Press and hold the Clear button.
5. Press the System SP button.
6. Expand the Feed button.
7. Expand the 1001 Leading Edge Registration button.
8. Select the Media Weight selection based on the media weight of the paper using the chart below.

1001.28 – Tray 1: Thin (Media Weight 1)	1001.35 – Tray 2: Thin (Media Weight 1)
1001.29 – Tray 1: Plain (Media Weight 2)	1001.36 – Tray 2: Plain (Media Weight 2)
1001.30 – Tray 1: Mid-Thick (Media Weight 3)	1001.37 – Tray 2: Mid-Thick (Media Weight 3)
1001.31 – Tray 1: Thick 1 (Media Weight 4)	1001.38 – Tray 2: Thick 1 (Media Weight 4)
1001.32 – Tray 1: Thick 2 (Media Weight 5)	1001.39 – Tray 2: Thick 2 (Media Weight 5)
1001.33 – Tray 1: Thick 3 (Media Weight 6)	1001.40 – Tray 2: Thick 3 (Media Weight 6)
1001.34 – Tray 1: Thick 4 (Media Weight 7/8)	1001.41 – Tray 2: Thick 4 (Media Weight 7/8)

## Adjusting the Duplex Side

9. Press the Printer Classic button.
10. Press the Reset button.
11. Use the number pad to enter 806182.
12. Press and hold the Clear button.
13. Press the System SP button.
14. Expand the Feed button.
15. Expand the 1001 Leading Edge Registration button.

1001.49 – Duplex: Thin (Media Weight 1)
1001.50 – Duplex: Plain (Media Weight 2)
1001.51 – Duplex: Middle Thick (Media Weight 3)
1001.52 – Duplex: Thick 1 (Media Weight 4)
1001.53 – Duplex: Thick 2 (Media Weight 5)
1001.54 – Duplex: Thick 3 (Media Weight 6)

## Front to Back Registration

Note: Front to Back registration controls the placement of the image from the front to the back of the printer.

16. Press the Printer Classic button.
17. Press the Reset button.
18. Use the number pad to enter 806182.
19. Press and hold the Clear button.
20. Press the System SP button.
21. Expand the Feed button.
22. Expand the 1002 Side to Side Registration button.

1002.2 – Paper Tray 1
1002.3 – Paper Tray 2
1002.6 – Duplex