

Figure 2: Shows a brush dampener of the type used on Harris presses, typical of the non-contacting brush design.

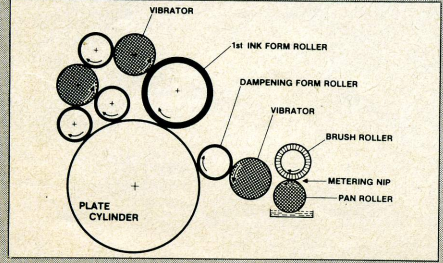


Figure 3: Also non-contacting, but of the spray design rather than the brush, is the Smith dampener shown here.

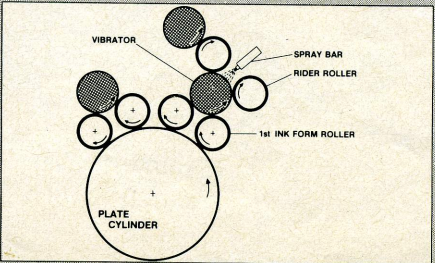


Figure 4: Illustrates the use of fabric-covered rollers in conventional or ductor-type designs of contacting units.

