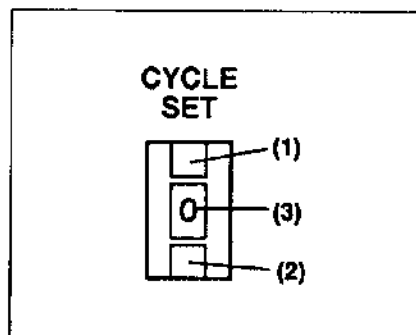


[Cycle Indication]


Indication	Cycle type	Setting possible range	Setting pitch	Factory setting value
CY-1	Wet cycle for the metal plate printing mode	1 to 50 rotations	Every 1 rotation	2 rotations
CY-2	Inking cycle	1 to 10 rotations	Every 1 rotation	2 rotations
CY-3	Blanket cleaning cycle	20 to 65 rotations	Every 5 rotations	20 rotations
CY-4	Wet cycle for the polyester plate or paper master printing mode	1 to 50 rotations	Every 1 rotation	10 rotations
CY-5	Press with Semiautomatic Plate Changer Wet cycle for mounting the paper master	0 to 50 rotations	Every 1 rotation	10 rotations

[Cycle setting procedures]

There are 2 cycle setting buttons (1) and (2).

When pushing either button, the cycle indication (3) in the middle changes and at the same time, the cycle indication and setting value will be indicated on the counter panel on the delivery section operation panel.

(Note) When pushing the button (1), the cycle set number is increased and when pushing the button (2), the cycle set number is reduced. The numbers can be changed from 0 to 9.

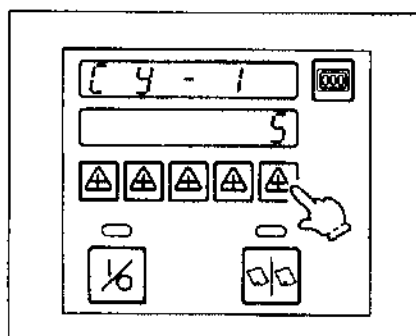

The setting value is set by using the counter set button on the delivery section operation panel.

[Press without Semiautomatic Plate Changer]

Set the cycle setting value from the CY-1 to the CY-4 by repeating the operation above.

(Note) After completing the setting of the set value, return the cycle set button indication to "0".

[Press with Semiautomatic Plate Changer]

Set the cycle setting value from the CY-1 to the CY-5 by repeating the operation above.

(Note) After completing the setting of the set value, return the cycle set button indication to "0".